


- NOTE:**
1. Fabricate spillway assembly from annular corrugated pipe, or from helically corrugated pipe with factory annular or reformed ends. Use 16 gauge galvanized steel or 16 gauge aluminum.
 2. Make all banded connections watertight by placing $\frac{1}{4}$ " bead of approved caulking under each half of the band before tightening.
 3. Payment for tee branch connection under Section 602 is included in the linear foot measurement for culvert pipe for the applicable sizes. Measure tee branch connections along the top of the tee.
 4. Furnish riprap conforming to Section 251. See detail C251-50.
 5. Galvanize all parts of the anchor assembly after fabrication.

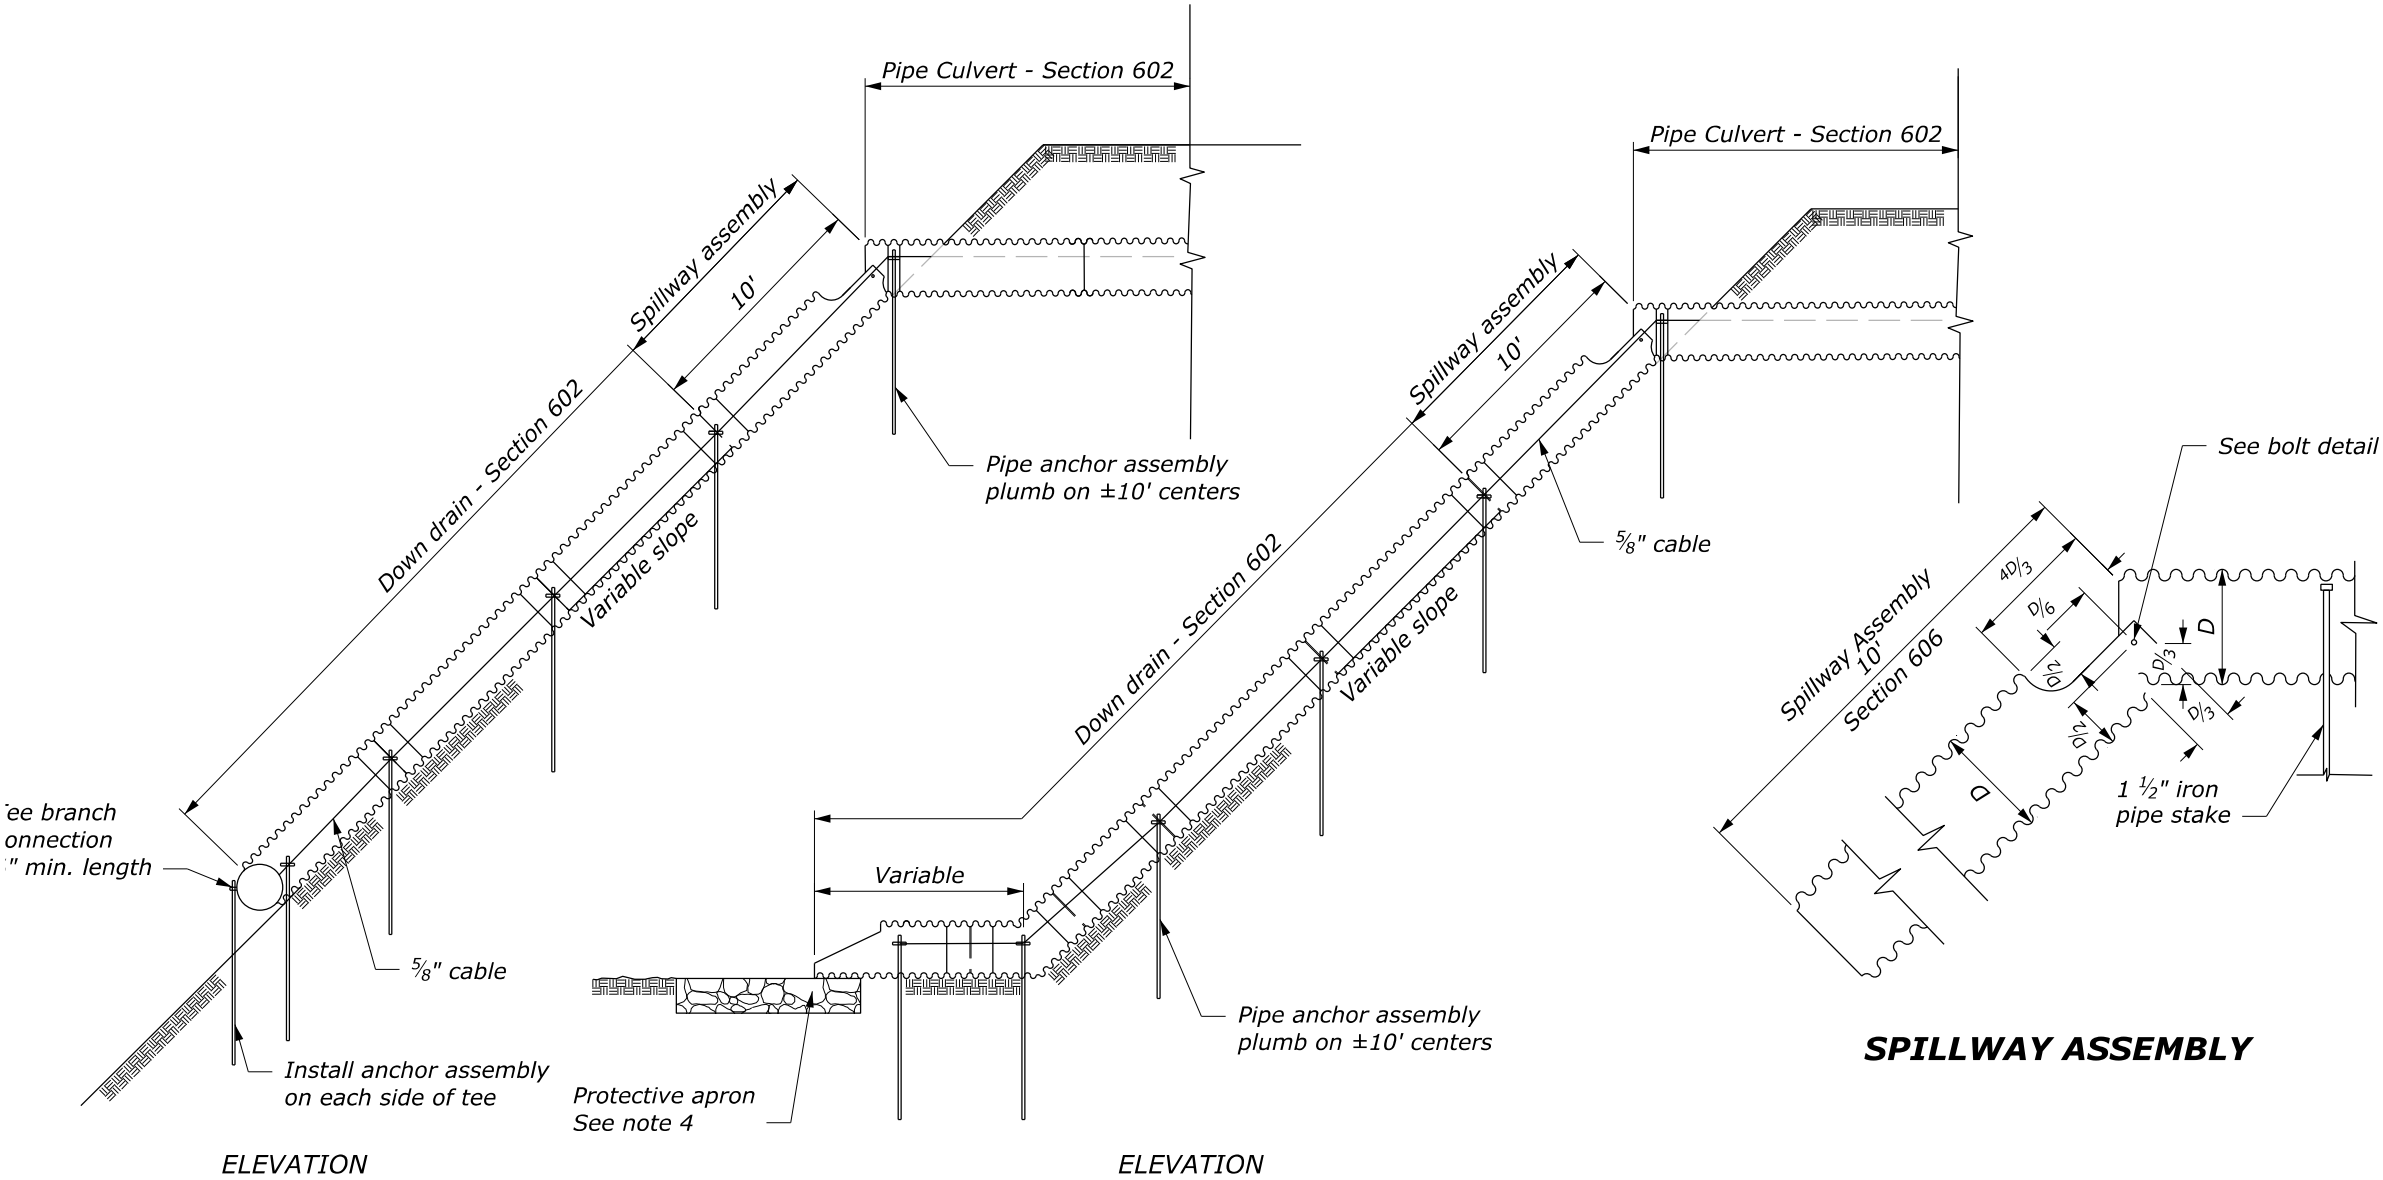

**SPILLWAY ASSEMBLY WITH DOWN DRAIN
OUTLET ON NON-ERODIBLE MATERIAL**

**SPILLWAY ASSEMBLY WITH DOWN DRAIN
OUTLET ON ERODIBLE MATERIAL**

