




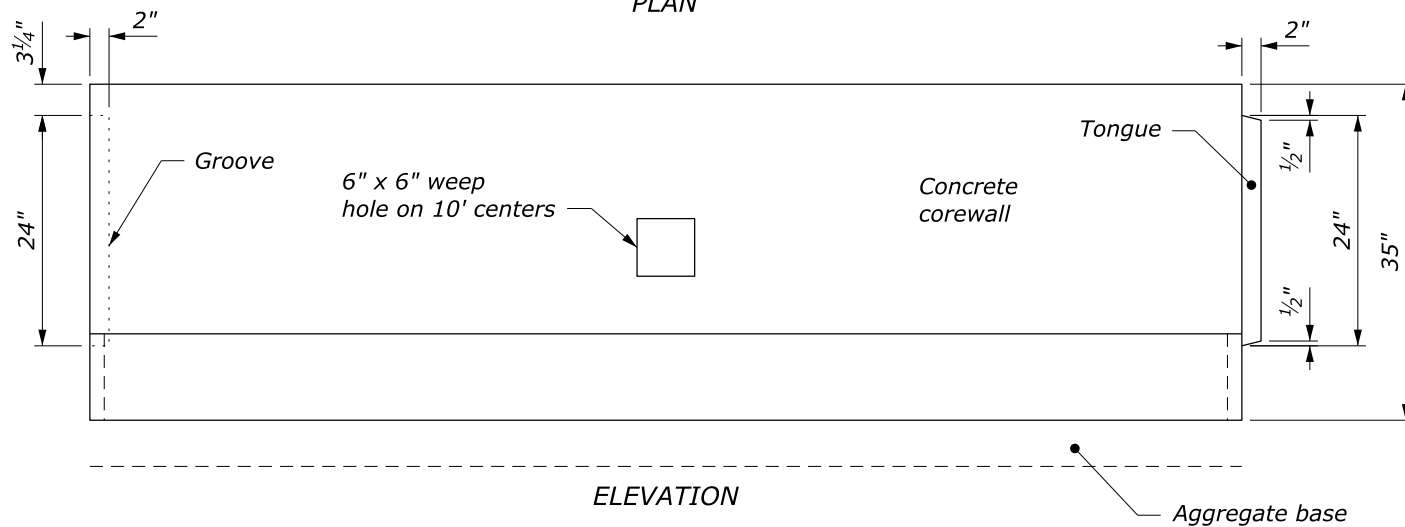


PRECAST CONCRETE COREWALL

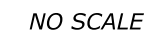

1. *Form construction joints in the corewall at 30-foot intervals or, at the option of the Contractor, construct the corewall of precast concrete units.*
2. *Use cast-in-place corewall on curves with radius less than 150 feet.*
3. *Depth of aggregate base may be less than 6 inches when the foundation is on either rock fill or solid rock.*
4. *See Typical Sections for guardwall offset distance and pavement structure.*
5. *Set galvanized metal slots with anchors for the stone work or other approved type of metal anchors in the concrete. Equivalent attachment systems are allowed with approval.*

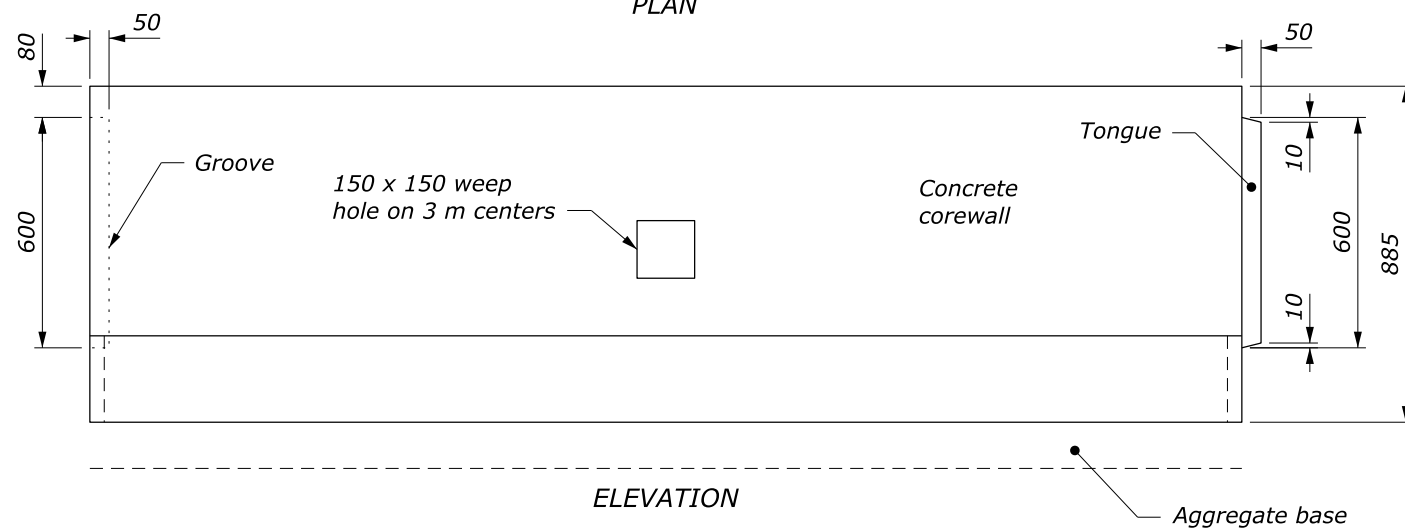

- Aggregate base

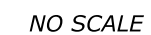

1. *Form construction joints in the corewall at 9 m intervals or, at the option of the Contractor, construct the corewall of precast concrete units.*
2. *Use cast-in-place corewall on curves with radius less than 50 m.*
3. *Depth of aggregate base may be less than 150 mm when the foundation is on either rock fill or solid rock.*
4. *See Typical Sections for guardwall offset distance and pavement structure.*
5. *Set galvanized metal slots with anchors for the stone work or other approved type of metal anchors in the concrete. Equivalent attachment systems are allowed with approval.*

APPROVED FOR USE
2/2024